



ULTRATECH
INTERNATIONAL, INC

Ultra-Inlet Guard Plus®

Installation and Maintenance Instructions

Part# 9160 - 9162

Ultra-Inlet Guard Plus Oil & Sediment Plus Model

Part# 9163 - 9165

Ultra-Inlet Guard Plus Oil & Sediment Plus Model, Curb-Style

Part# 9170 - 9172

Ultra-Inlet Guard Plus Oil & Sediment Model

Part# 9173 - 9175

Ultra-Inlet Guard Plus Oil & Sediment Model, Curb-Style

Installation:

1. Clean dirt and debris from grating
2. Place Inlet Guard on top of grating
3. Line up fabric with grating ensuring magnets stick securely

Maintenance:

- Remove built up sediment from Ultra-Inlet Guard Plus and surrounding area as needed
- Remove sediment and debris from overflow port
- Inspect periodically and after every significant rain event for misalignment
- Inspect periodically for wear and tear and premature damage

