



Ultra-Gutter Guard[®] Installation and Removal Instructions

Installation:

1. Remove large rocks, trash and debris from drain and surround area. If possible/practical, sweep the area.
2. Place Ultra-Gutter Guard in front of the curb inlet or around a drain.
3. Overflow ports should be facing out (see photo below)
4. If placed in front of a curb inlet, there should be at least 12" of overlap on both sides of the inlet.
5. Maintenance: Unit should be checked periodically (after every significant rain even at a minimum). Remove dirt, debris, etc. from around the Ultra-Gutter Guard and surrounding area.

Removal:

1. Remove any accumulated silt, sand, trash and debris from the area.
2. Remove Ultra-Gutter Guard from inlet/drain.
3. Depending on the condition of the unit, the Ultra-Gutter Guard can be reused.
4. If desired, rinse thoroughly with water and allow to air dry before storing.
5. Store in clean/dry area until needed.

