



**ULTRATECH**  
INTERNATIONAL, INC.

## Ultra-Pellet Trap®

### Installation and Maintenance Instructions

(Part# 9227 & 9229)

#### Installation:

1. Remove catch basin grating.
2. Clean dirt and debris from grating ledge
3. Insert Pellet Trap.
4. Reinstall grate. If optional Retainers are not used, Pellet Trap skirt must be secured (pinched) between grating and ledge.
5. Cut the excess fabric off with a blade or knife if desired.

#### Installation with optional Ultra-Drain Guard Retainers (Part# 9237 / 9238):

- Follow steps 1 and 2 above. Insert Retainer through handling straps of Drain Guard. (Each Retainer should be holding two straps).
- Insert Drain Guard, placing Retainers across basin opening so that flat plates lay on grating ledge.
- Follow steps 4 and 5 above.

#### TIPS

- Use rebar, steel rod or other weights to hold the skirt in place when replacing the grating.
- Alternatively, you can lay the Pellet Trap on the ground and then lift the grating out and place it on top of the Pellet Trap. Then wrap the excess fabric around the grate and secure it using tape, magnets or clamps.

#### Maintenance and Disposal:

1. The Ultra-Pellet Traps are designed to be used for 3 to 6 months under normal conditions. Where heavy contamination is present the unit will have a reduced life expectancy. When the unit has collected about 6 inches of pellets it is recommended that it be emptied or replaced. The Ultra-Pellet Trap should be inspected on a regular basis.
2. Dispose of unit in accordance with applicable Federal, state and local environmental laws and regulations. The user is solely responsible for compliance with maintenance and disposal laws and regulations. The manufacturer or seller assumes no responsibility for proper or improper maintenance or disposal.





**ULTRATECH**  
INTERNATIONAL, INC.