



ULTRATECH
INTERNATIONAL, INC.



Ultra-Grate Topper™

Installation Instructions

NOTE: Before beginning installation, all personnel should don the appropriate personal protective equipment (PPE). The following PPE is recommended: Hard hat, safety glasses, high-visibility vest, work gloves, steel-toed boots

INSTALLING

1. Remove the grating from the catch basin and set aside. Using a steel brush and/or scraper, clean the edge that supports the grate from dirt and grime.
2. Lay the Ultra-Grate Topper upside down on the road surface.
3. Place the grate upside down on the Ultra-Grate Topper.

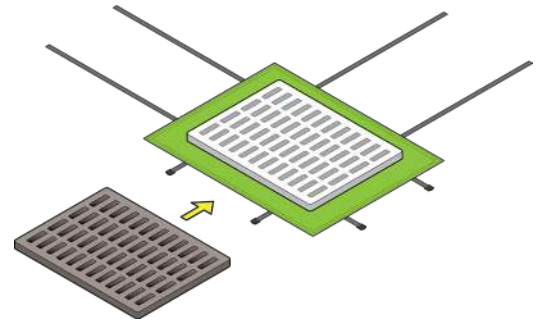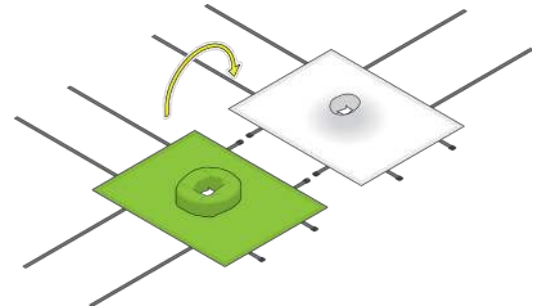

4. Loosely connect the webbing straps across the grate to the corresponding buckles. Individually slowly tighten the straps while tucking the corner fabric in toward the center.
5. Turn over and replace the grate into the catch basin. This completes the installation.

